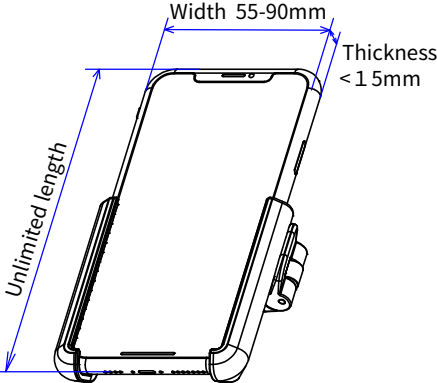
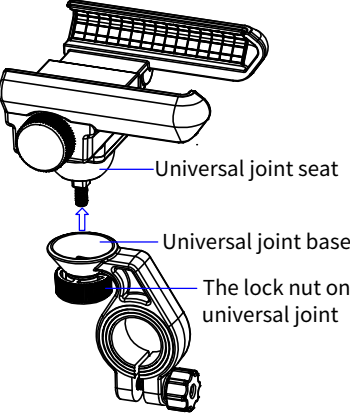
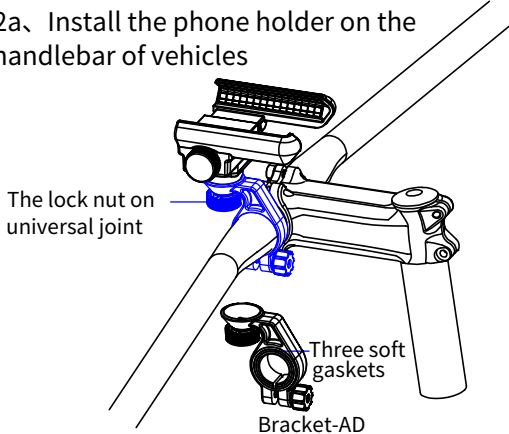
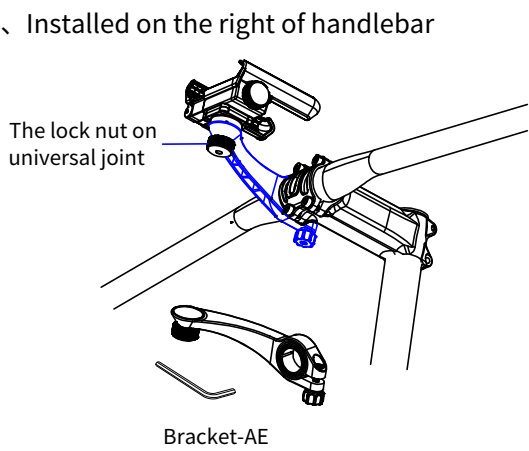
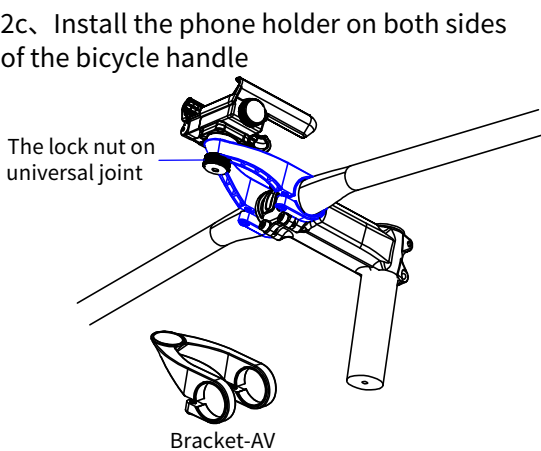
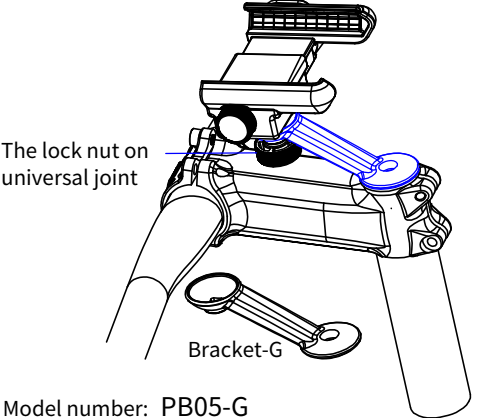
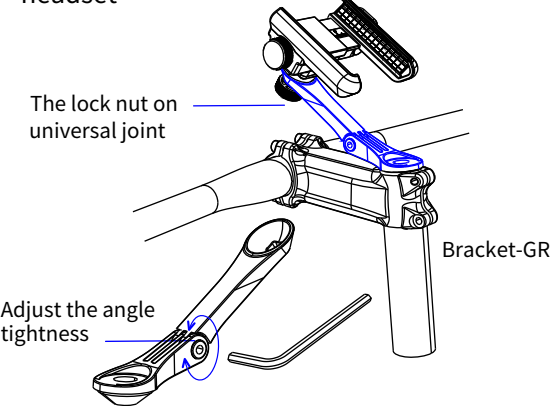
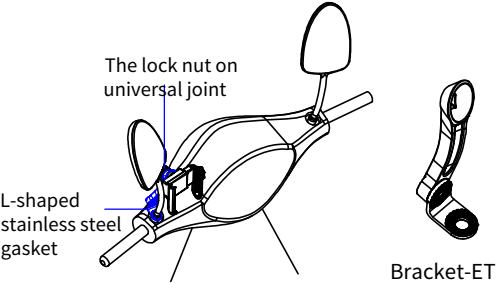
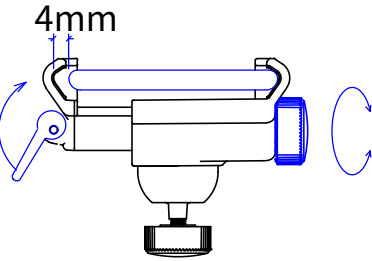
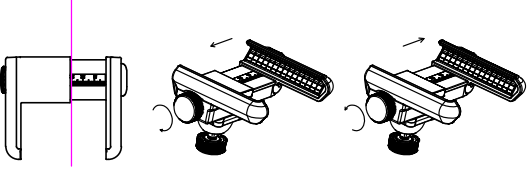
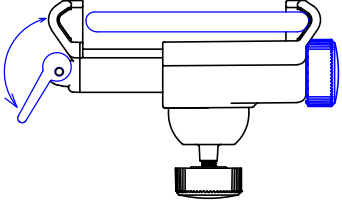


名称	PB05说明书
尺寸	单面60x85/整张300x170 (mm)
备注	1、2、3、4、5页打在正面, 6、7、8、9、10页打在背面

<p><b>PB05 Mobile phone holder instruction manual 2024 edition</b></p>  <p>A. This instruction is suitable for PB05 phone holders. B. More use problems and skills, please ask the local distributors.</p> <p><b>Patented products, quality assurance</b></p> <p>-1-</p>	<p><b>1、Connect the phone holder mount with different brackets</b></p>  <p>Model number: PB05</p> <p>This phone holder edition can be connected with different brackets, to be installed on different position for different vehicles. And it can make phones 360° adjustment. More details please read the 3th to the 5th page of the instruction manual.</p> <p>-2-</p>	<p><b>2a、Install the phone holder on the handlebar of vehicles</b></p>  <p>Model number: PB05-AD</p> <p>Suitable vehicles: bicycles, motorcycles, electric vehicles Install position: handlebar (diameter range: 22-31.8mm) (1). Release the screw (2). Choose the right gasket according to the handlebar diameter (3). Install the bracket-AD on the handlebar and lock the screw (4). Adjust angle of the phone holder and lock the nut on the universal joint</p> <p>-3-</p>	<p><b>2b、Installed on the right of handlebar</b></p>  <p>Model number: PB05-AE</p> <p>Suitable vehicles: bicycles, E-bike, scooters Install position: handlebar (diameter range: 22-35mm) (1). Release the screw (2). Choose the right gasket according to the handlebar (3). Install the bracket-AE on the handlebar and lock the screw (4). Adjust angle of the phone holder and lock the nut on the universal joint</p> <p>-4-</p>	<p><b>2c、Install the phone holder on both sides of the bicycle handle</b></p>  <p>Model number: PB05-AV</p> <p>Suitable vehicles: bicycles, E-bike, scooters Install position: handlebar (diameter range: 22-35mm) (1). Release the screw (2). Choose the right gasket according to the handlebar (3). Install the bracket-AV on the handlebar and lock the screw (4). Adjust angle of the phone holder and lock the nut on the universal joint</p> <p>-5-</p>	<p><b>2d、Install the phone holder on the bicycle headset</b></p>  <p>Model number: PB05-G</p> <p>Suitable vehicles: mountain bicycles, road bicycles Install position: install on the headset of bicycles (1). Remove the screw on the headset of bicycles (2). Instead of the headset by bracket-G and lock it (3). Adjust the angle of the phone holder and lock the universal joint nut</p> <p>-6-</p>	<p><b>2e、Install the phone holder on the bicycle headset</b></p>  <p>Model number: PB05-GR</p> <p>Suitable vehicles: mountain bicycles, road bicycles Install position: install on the headset of bicycles (1). Remove the screw on the headset of bicycles (2). Instead of the headset by bracket-GR and lock it (3). Adjust the angle of the phone holder and lock the universal joint nut</p> <p>-7-</p>	<p><b>2f、Install the phone holder on the rear-view mirror screw hole position of vehicles</b></p>  <p>Model number: PB05-ET</p> <p>Suitable vehicles: motorcycles, electric vehicles Install position: install on the rear-view mirror screw hole position (the diameter of the rear-view mirror screw: 6mm, 8mm, 10mm) (1). Loosen the rear-view mirror and remove it from the vehicle (2). Place the L-shaped stainless steel gasket in the screw of the removed rear-mirror (3). Re-install the rear-mirror with L-shaped stainless steel gasket and lock it (4). Adjust the angle of the phone holder and lock the universal joint nut</p> <p>-8-</p>	<p><b>3、On first use: adjust the spacing of V-groove to tighten the phone</b></p>  <p>(1). Leave the handle be released (2). Place the phone in the V-groove (3). Adjust the knob to the distance between the phone and the groove about 4mm (4). Close the handle to lock the phone</p> <p>Tip: For the first use, adjust the knob to make the phone clamped tightly. If the mobile phone size is the same after the first operation, just open or lock the switch to access the mobile phone. When changing different sizes of mobile phones, please repeat the above operations.</p> <p>-9-</p>	 <p>Attention: When adjusting the width of the bracket, the maximum width should not exceed 30mm, that is, when the scale of the sliding seat shows the number "30", do not loosen it outward, otherwise it may cause the bracket to disassemble and cannot be used</p> <p><b>4、Daily use:</b> Close the handle to lock the phone; Release the handle to remove the phone easily</p>  <p>-10-</p>
60	60	60	60	60					