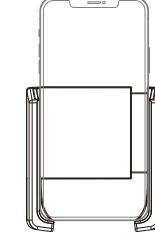
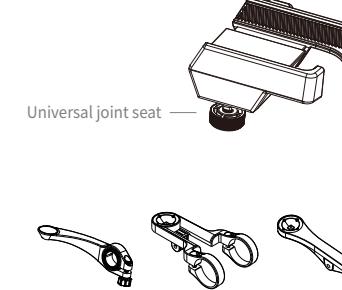
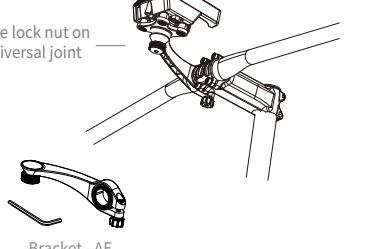
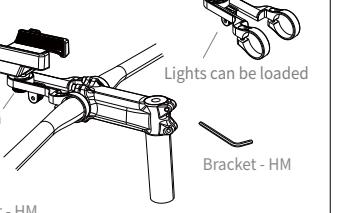
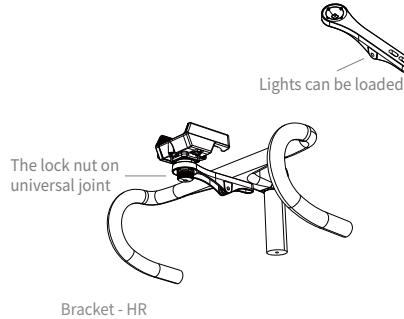
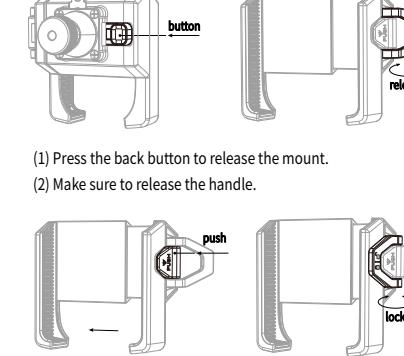
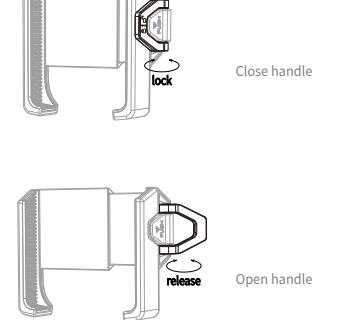
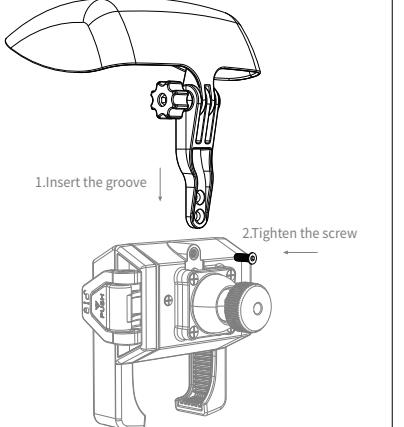


名称	PB11/AE HM HR/说明书/250508
尺寸	85*60 (mm)

1、2、3、4页打在正面,5、6、7、8页打在背面

60 MM

85 MM

<p>PB11 Mobile phone holder instruction manual 2025 edition (AE/HM/HR)</p>  <p>A. This instruction is suitable for PB11 phone holders. B. More use problems and skills, please ask the local distributors.</p> <p>Patented products, quality assurance</p> <p>-1-</p>	<p>1. Connect the phone holder mount with different brackets</p>  <p>Model number: PB11 This phone holder edition can be connected with different brackets, to be installed on different position for different vehicles. And it can make phones 360° adjustment. More details please read the 3th to the 4th page of the instruction manual.</p> <p>-2-</p>	<p>2a. Install the phone holder on the handlebar of vehicles</p>  <p>Model number: PB11-AE Suitable vehicles: bicycles, motorcycles, electric vehicles Install position : handlebar (diameter range : 22-31.8mm) (1). Release the screw. (2). Choose the right gasket according to the handlebar diameter. (3). Install the bracket-AE on the handlebar and lock the screw. (4). Adjust angle of the phone holder and lock the nut on the universal joint.</p> <p>-3-</p>	<p>2b. Install the phone holder on the rear-view mirror screw hole position of vehicles</p>  <p>Model number: XB02-HM Suitable vehicles: bicycles, electric vehicles Install position : handlebar (diameter range : 22-31.8mm) (1). Release the screw. (2). Choose the right gasket according to the handlebar diameter. (3). Install the bracket-HM on the handlebar and lock the screw. (4). Adjust angle of the phone holder and lock the nut on the universal joint. (5). Lights can be mounted on the bottom</p> <p>-4-</p>
<p>2c. Install the phone holder on the bicycle headset</p>  <p>Model number: XB02-HR Suitable vehicles: road bicycles Install position: Bicycle integral handlebar holes (1). Instead of the headset by bracket-HR and lock it. (2). Adjust the angle of the phone holder and lock the universal joint nut. (3). Lights can be mounted on the bottom</p> <p>-5-</p>	<p>3. First use</p>  <p>(1) Press the back button to release the mount. (2) Make sure to release the handle. (3) Putting the mobile phone on the mount and Press the side button to fit the size of the phone. (4) Close the handle to lock the phone.</p> <p>-6-</p>	<p>4. Daily use</p>  <p>Close handle Open handle Close the handle to lock the phone; Open the handle to remove the phone easily.</p> <p>-7-</p>	<p>5. Sun hat for choice</p>  <p>1. Insert the groove 2. Tighten the screw</p> <p>-8-</p>