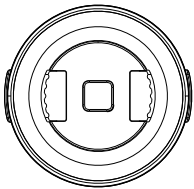
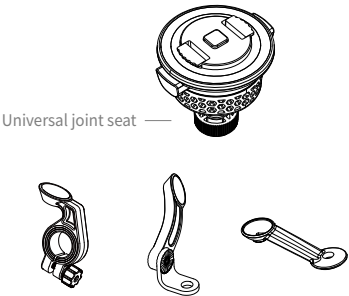
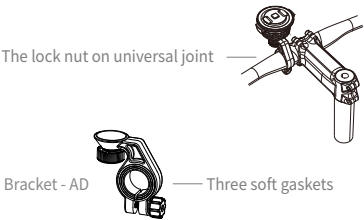
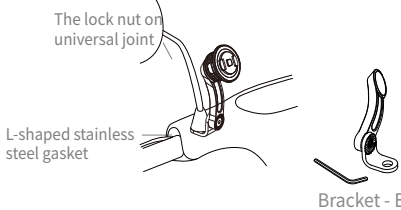
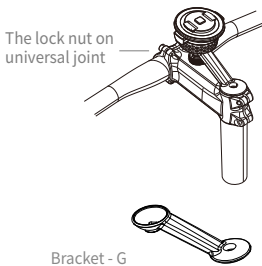
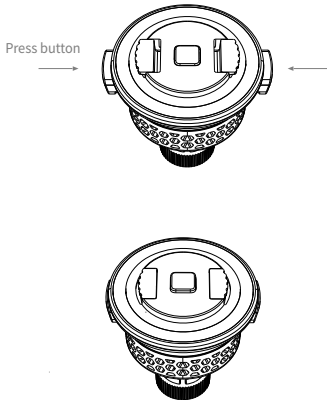
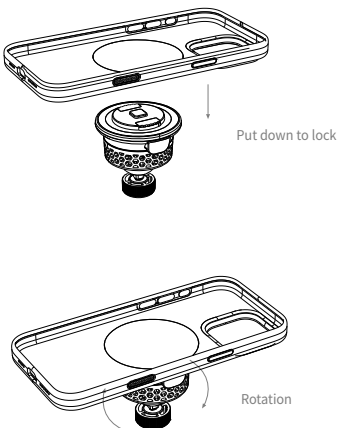
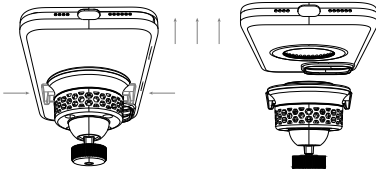



名 称	XB02/AD ET G/说明书/250613
尺 寸	85*60 (mm)

1、2、3、4页打在正面，5、6、7、8页打在背面

85 MM	60 MM	<div>XB02 Mobile phone holder instruction manual 2025 edition (AD/ET/G)</div> <div></div> <div>A. This instruction is suitable for XB02 phone holders. B. More use problems and skills, please ask the local distributors.</div> <div>Patented products,quality assurance</div> <div>-1-</div>	<div>1. Connect the phone holder with different brackets</div> <div></div> <div>Model number: XB02 This phone holder edition can be connected with different brackets, to be installed on different position for different vehicles. And it can make phones 360° adjustment.More details please read the 3th to the 4th page of the instruction manual.</div> <div>-2-</div>	<div>2a. Install the phone holder on the handlebar of vehicles</div> <div></div> <div>Model number: XB02-AD Suitable vehicles: bicycles, motorcycles, electric vehicles Install position : handlebar (diameter range : 22-31.8mm) (1). Release the screw. (2). Choose the right gasket according to the handlebar diameter. (3). Install the bracket-AD on the handlebar and lock the screw. (4). Adjust angle of the phone holder and lock the nut on the universal joint.</div> <div>-3-</div>	<div>2b. Install the phone holder on the rear-view mirror screw hole position of vehicles</div> <div></div> <div>Model number: XB02-ET Suitable vehicles: motorcycles, electric vehicles Install position: install on the rear-view mirror screw hole position(the diameter of the rear-view nror screw: 6mm,8mm,10mm) (1). Loosen the rear-view mirror and remove it from the vehicle. (2). Place the L-shaped stainless steel gasket in the screw of the removed rear-mirror. (3). Re-install the rear-mirror with L-shaped stainless steel gasket and lock it. (4). Adjust the angle of the phone holder and lock the universal joint nut.</div> <div>-4-</div>
		<div>2c. Install the phone holder on the bicycle headset</div> <div></div> <div>Model number: XB02-G Suitable vehicles: mountain bicycles, road bicycles Install position: install on the headset of bicycles (1). Remove the screw on the headset of bicycles. (2). Instead of the headset by bracket-G and lock it. (3). Adjust the angle of the phone holder and lock the universal joint nut.</div> <div>-5-</div>	<div>3.First use</div> <div></div> <div>Check that the button is pressed before use</div> <div>-6-</div>	<div>4a.Daily use</div> <div></div> <div>-7-</div>	<div>4b.Daily use</div> <div></div> <div>Press the button to take away the phone</div> <div>5.Optional accessories</div> <div></div> <div>(Accessories for choice)</div> <div>-8-</div>